

Panel-PC-W-i5-16-256-02-19-C

Windows Panel PC (16:9) with Intel® Core™ i5-1235U Processor




Panel-PC-W-i5-16-256-02-19-C is a Windows industrial panel pc with a capacitive 16:9 TFT LCD touchscreen and pre-installed Automation Browser. Power Supply 24V DC.

The Panel PC with a 16:9 aspect ratio, comes with a pre-installed Automation Browser and is designed to seamlessly connect controllers with their web server (e.g., CODESYS V3 web server). The setup and operation of the web browser are intuitive and straightforward. Equipped with integrated WiFi and Bluetooth interfaces, this device supports a wide range of applications. Its front panel is IP65-rated, and the aluminum housing provides a compact, robust design. The projected capacitive touch enables multi-touch functionality for smooth user interaction.

This 24V DC Panel PC series is powered by a high-performance Intel® Core™ i5-1235U Processor. It is available in 4/8/16/32GB RAM versions and 64/128/256/512GB and 1TB eMMC storage versions, ensuring responsive and efficient operation. A 4:3 variant of the same product exists as well. Connectivity options include onboard Wi-Fi, USB-OTG, TF/SIM, LAN, COM, Audio I/O, HDMI, and a 2-pin connector for power supply. This Panel PC can be customised with Win10 Professional, Win10 IoT, or Win10 Enterprise OS.

The WebPanels are available in display sizes ranging from 10" to 24", with the option of projected capacitive touch or non-touch, offering versatility for various industrial and commercial applications. For more details on how to specify and order the exact product configuration, please refer to the naming convention image provided below.

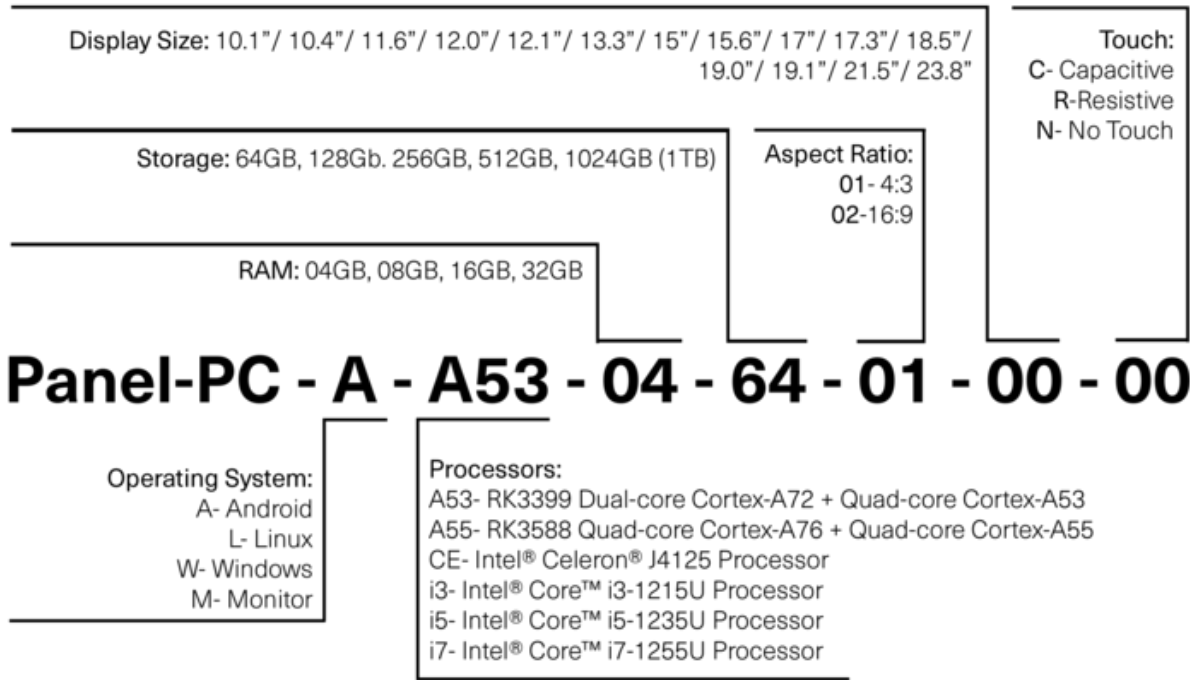

ORDER DETAILS

Function: TFT LCD WebPanel, 24V DC power supply, Win10 Professional / Win10 IoT / Win10 Enterprise, IP65 compact fanless housing, processor: Intel® Core™ i5-1235U Processor, Wi-fi
SKU/Order No.: SA-P-W-i5-16-256-02-19-C



Technical Data

Certification

Certification	CE, FCC Class A, CCC
---------------	----------------------

Ambient Condition

Operating Humidity (non-condensing)	10 ... 80%
Storage Humidity (non-condensing)	10 ... 90%
Ambient Temperature (storage/transport)	-20 ... 70°C
Ambient Temperature (operating)	-10 ... 65°C

Mechanical Data

Housing	Aluminum alloy
Bezel Thickness	3mm

Standards and Regulations

In Compliance With	IP65
--------------------	------

Input Data

Power Consumption (max.)	Typical Consumption: 18W, Maximum Consumption: 48W
Ports	Coaxial power connector (5,5 x 2,5 mm): 12 ... 36 VDC, Screw terminal: 12 ... 36 VDC, 1xSIM card slot, 1xTF/SD card slot, 1xHDMI, 2x 10/100/1000 BaseT(X) RJ45, 1x3.5mm Audio output interface, 6-pin screw terminal: 2x RS-232 (from 12") 12-pin screw terminal: 2x RS-232, 1x RS-485, 3x GPIO (from 15")

Interface

USB Ports	USB: 2 x USB 2.0 Typ A, 2 x USB 3.0 Typ A
-----------	---

Display Features

Aspect Ratio	16:9
--------------	------

Contrast	1000:01:00
Display colors	16.7M (8-bit)
View angle	85/85/85/85 (L/R/U/D)
Luminance	300 ... 1000 nits
Panel Type	Industrial A grade LCD with LED backlight
Response time	5ms
Touch Screen	Default with 10-point capacitive touch
Touch Screen Surface Hardness	7 Mohs
Touch Screen Transparency	90% (±3%)
Assembly	VESA 100 x 100 and/or 75 x 75 panel mounting

System Hardware

Processor	Intel® Core™ i5-1235U Processor
OS Support	Win10 Professional / Win10 IoT / Win10 Enterprise
Memory	16GB (with variants : 4/8/32GB)
Storage	256GB eMMC (with variants: 64/128/512GB and 1TB eMMC)

IEEE Standards

IEEE 802-11A	Wi-Fi 2
IEEE 802-11B	Wi-Fi 1
IEEE 802-11G	Wi-Fi 3
IEEE 802.11N	Wi-Fi 4
IEEE 802.15	Bluetooth 5.0
IEEE 802-11E	Quality of Service (QoS)
IEEE 802-11AC	Wi-Fi 5
IEEE 802-11D	Enables Roaming
IEEE 802-11H	Spectrum and Transmit Power Management Extensions
IEEE 802-11I	Wi-Fi Protected Access II (WPA2)
IEEE 802-11W	Protected Management Frames

Commercial Data

Customs Tariff Number	84714100
-----------------------	----------