


Maschinenbau Kitz GmbH


Headquarters of the mk Technology Group


www.mk-group.com info@mk-group.com

GUF-P MINI, AD head drive 90 W, optional with motor protection switch (MPS)

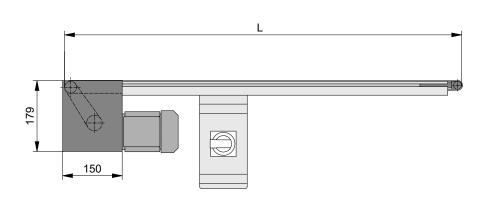

TECHNOLOGY GROUP

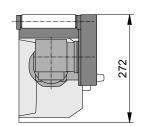



Technical Data				
Conveyor width B	100 / 150 mm			
Conveyor length L	1000 / 1500 / 2000 mm			
Conveyor belt	PU, white FDA, allows for restricted accumulated operation			
Drive	AD head drive, 90 W / SEW / AC 230V 50 Hz / IP 54			
Drive location	0° horizontally under the belt, either on the left or right (default left)			
Speed	6 m/min.			
Standard total load	< 10 kg			
Type of transport	forwards only, continuous operation			
Power supply	optional with motor protection switch, with external DC 24 V interface for start/stop			
Driving roll	ø 32 mm, w/o rubber coating			
Tail	01, ø 22 mm			
Power transmission	chain drive			
Fastener	Angels			

Technical Data

Maschinenbau Kitz GmbH

Headquarters of the mk Technology Group

www.mk-group.com info@mk-group.com

Variants

Conveyor width B [mm]	Conveyor length L [mm]	Belt width B-10 [mm]	Item number without MPS	Item number incl. MPS
100	1000	85	02-10014059-DE1	02-10012568-DE1
100	1500	85	02-10014061-DE1	02-10012569-DE1
100	2000	85	02-10014062-DE1	02-10012570-DE1
150	1000	135	02-10014063-DE1	02-10012571-DE1
150	1500	135	02-10014064-DE1	02-10012572-DE1
150	2000	135	02-10014065-DE1	02-10012573-DE1

Other options and accessories

Lengths: 400 to 3.000 mm

Widths: 75 mm

Total load: up to 15 kg (with width of 150 mm)

Speed: up to 15 m/min

Motor installation position: pointing downwards 90°

Belt types: from suitable to unsuitable

for accumulated operation

Side rails and stands

Motor Protection Switch

The motor protection switch is used for power supply of the motor and meets, with motor protection and a main switch, the requirements of the Machinery Directive for a complete machine. In addition, a 24V DC interface is available for start/stop control. It is installed in a separate IP54 PVC housing and is wired ready for connection with plug connections. The supply voltage is 400V AC/50 Hz/16A.



GUF-P MINI, AD head drive 90 W, with motor protection switch (optional)

Make it simple and use our **QuickDesigner online configurator:**

- Always the optimal conveyor for your application
- Get a 3D CAD model and quotation quickly and easily
- Available 24/7 online with secure data transfer
- Tailor-made adjustments based on the starting model

Find more information about our belt conveyors here: